


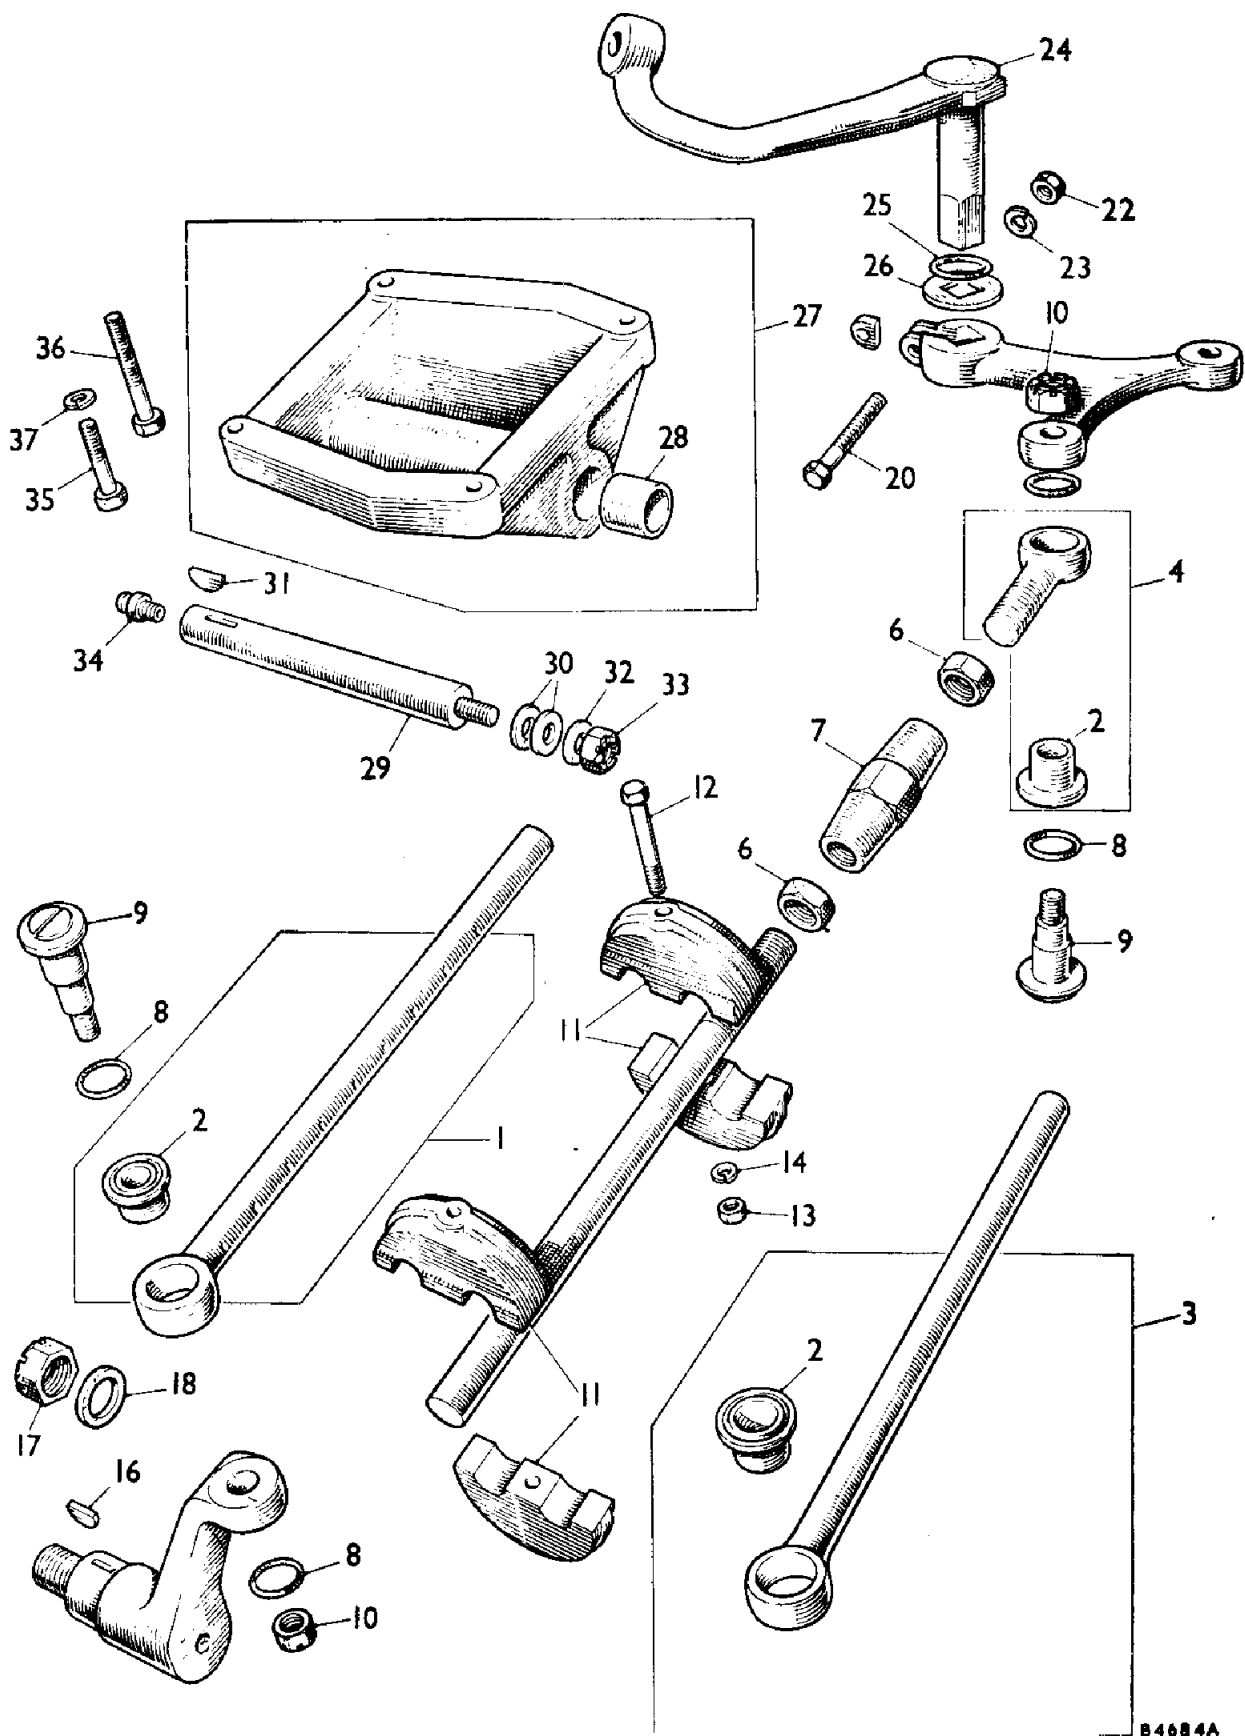

DESCRIPTION	Part No.	Bus. No.	Quantity	Stock recommenda.			Change Point	REMARKS
				DIST.		D		
				Exp.	UK			

Front Axle—continued

Rod—track	NT 4965§	1	1				
Bush	NT 6296§	2	1				
Rod—track	NT 4967§	3	2				
Bush	NT 6296§	2	2				
End—track rod	NT 4866§	4	1				
Bush	NT 6296§	2	1				
Nut—adjuster rod—LHT	NT 4865§	6	1				
Nut—adjuster rod—RHT	FNN 214	6	1				
Turnbuckle	NT 4862§	7	1				
Ring—sealing	NT 4375§	8	8				WSE; use TRS 1620
Ring—sealing	†TRS 1620	8	8				
Pin—track rod	NT 5925§	9	4				
Nut—slotted—pin	FNN 409	10	4				
Clamp—track rod	NT 2196§	11	8				
Bolt—clamp	HBN 0924	12	4				
Nut—bolt	†ATJ 1081	13	4				Was FNN 109
Washer—spring—nut	LWN 209	14	4				
Key—track rod arm	WKN 507	16	2				Part No. change; was NT 3047
Nut—slotted—track rod arm	FNN 312	17	2				
Washer—plain—nut	4DM PWN 112	18	2				DE1001 to 5127
Bolt—lever clamping	NT 6029§	20	1				
Nut—clamping bolt	FNN 107	22	1				
Washer—spring—nut	LWN 207	23	1				
Lever and shaft—steering	NT 6110§	24	1				
Ring—sealing	NT 4368§	25	2				
Washer—sealing ring	NT 4365§	26	1				
Bracket—trunnion	NT 2464§	27	1				
Bush	NT 3004§	28	2				
Pin—trunnion	NT 4854§	29	1				
Washers—distance—pin							
•120" (3-048 mm.)	NT 3093§	30	A/R				
•150" (3-810 mm.)	NT 3094§	30	A/R				
•180" (4-527 mm.)	NT 3095§	30	A/R				
•090" (2-287 mm.)	NT 5636§	30	A/R				
Key—trunnion pin	WKN 505	31	1				Part No. change; was NT 3045
Washer—plain—pin	PWN 114	32	1				
Nut—slotted—trunnion pin	FNN 314	33	1				
Greaser	UHN 105	34	1				
Bolt—trunnion bracket to main frame	HBN 1226	35	2				
Bolt—trunnion bracket to main frame	HBN 1218	36	2				
Washer—spring—bolt	LWN 212	37	4				